




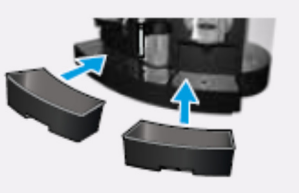

## Descaling instructions Nespresso CS223

Turn the white tap at the back left side of the machine to the off position(Vertical)

1.	<p>Empty all drip trays and capsule containers and insert them back into place. Place some trays under each of the spouts. Make sure there is sufficient water in the water tanks.</p>	
2.	<p>Press Standby on/off button on machine, wait until it stops flashing. All the cup lights should be off.</p>	<p><b>Standby</b></p> 
3.	<p>Hold down the buttons marked in red for 5 long seconds until it displays Language: English</p> <p>Press and hold "Short black and Long black buttons and then press and hold the Standby button for 5 long seconds.</p>	
4.	<p>This will bring you to the menu of the machine Press the up and down button until it displays "start descaling" Then press the middle cup button to enter.</p>	
5.	<p>It will then display "Fill descaling fluid push a button"</p> <p>Fill the left tank with 2/3 of water and add 4 packets of solution. Fill the right tank with 1/3 of water abd add 2 packets of solution. Then push any cup button.</p>	<p><b>Fill descaling fluid Push a button</b></p>
6.	<p>NOTE: DO NOT stop the descaling process otherwise you will need to start again. Water will pour out from each spout. When you reach half way it will automatically stop and display "Fill water push a button". Empty drip trays and fill the water tanks to the top with cold water and then press any cup button again for a rinsing cycle.</p>	
7.	<p>The machine will automatically stop once it's finished rinsing and it will display "Exit push a button"</p> <p>Push any cup button and now the descaling process is complete.</p>	