



## IMPORTANT REMINDER REGARDING THE CLEANING & MAINTENANCE OF YOUR MACHINE

### **For All Nespresso Professional Machines - Including any extended period of “non-use”**

1. Read all instructions and safety guidelines before operating the appliance
2. Ensure daily and end of day cleaning is performed and done correctly
3. Ensure surfaces are clean and no liquids in the machine E.g. Descaler, Water, Coffee and/or Milk
4. Ensure the machine and all containers are clean and used capsules removed from the machine
5. We would suggest that you also descale any machine/s as an additional precaution
6. Before cleaning and servicing, remove the plug from the mains socket and let the machine cool down
7. Do not unplug by pulling the cable and beware of sharp edges
8. Remove the plug from the mains socket if you will not be using the machine for an extended time
9. Clean and remove any obstructions around the machine and/or surfaces etc..

### **For all plumbed in (Direct water feed) Nespresso Professional Machines**

1. Read all instructions and safety instructions before operating the appliance
2. If no responsible person is present (e.g. at night, weekends, vacations, etc.), the connection to the water mains supply must be closed. (Isolated at stop tap)
3. Gemini models CS100/CS200/CS220/CS203/CS223 – **Do not remove water tanks when plumbed in**, follow user and safety guides
4. MOMENTO models M100 and M200 – **Do not remove water tanks when plumbed in**, follow user and safety guides
5. Remove the plug from the mains socket if you will not be using the machine for an extended time

Please click this [LINK](#) to find User Manuals and videos on our website

If you are unsure about any of these instructions, please call Nespresso Professional on 0808 100 8844\*

\*Coffee Specialists are available Monday to Friday 7am to 10pm. Some services are only available Monday to Friday from 8am to 6pm). or by using the form available here.