



**NESPRESSO**<sup>®</sup>

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



*U* (BELOW SERIAL #13142)



Duration: 15-20 minutes

### STEP 1



Empty the capsule container, drip tray/cup support and water tray then reinsert.

### STEP 2




Place a large container under the coffee outlet. The drip tray/cup support can be left aside.

### STEP 3



Fill the water tank halfway full with water, add **1 packet** of descaling solution and place onto the machine.

### STEP 4

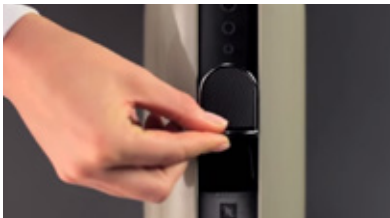

Turn the machine on by pressing any cup button or opening the slider. Wait for the light to become steady.

### STEP 5



To enter descaling mode, press and hold all three cup buttons for at least 3 seconds. A short beep will confirm and all the buttons will blink simultaneously.

### STEP 6



Close the slider to start descaling. The solution will pass through the coffee outlet.

### STEP 7



The machine will stop once the tank is empty. The cup buttons will scroll in succession from front to rear.

### STEP 8



Refill the water tank with the used solution.

### STEP 9



Empty the water tray and reinsert.



## STEP 10



Replace the large container under the coffee outlet. Press and release any button to resume the descaling. All buttons will blink simultaneously.

## STEP 11



Discard the solution and rinse the water tank thoroughly before refilling the tank to the top with fresh water and placing back onto the machine.

## STEP 12



Empty and rinse the water tray and capsule container before placing back onto the machine.

## STEP 13



Replace the large container under the coffee outlet. Press and release any button to start rinsing. All the buttons will blink simultaneously.

## STEP 14



The machine will stop when the rinsing is complete. The cup buttons will scroll in succession from front to rear.

## STEP 15



Open the slider until resistance is felt. The three cup buttons will all blink simultaneously.

## STEP 16



To exit descaling mode, press and hold all three cup buttons for at least 3 seconds. You will hear a short beep.

## STEP 17



Empty and rinse the water tray and capsule container before placing back onto machine.

## STEP 18



Rinse the water tank thoroughly and refill the tank to the top with fresh water before placing back onto machine.



## STEP 19

---



Wipe down the machine with a damp cloth. Replace the drip tray/ cup support. Let the machine rest for 10 minutes. The machine is now ready for use.