



VERTUO LATTISSIMA



Duration: 20-25 minutes
Requires **2 packets** of solution

STEP 1



Blinks orange = Descaling alert.

Fast blinking orange = A few more uses before machine blocked.

Steady orange = Descaling mandatory.

STEP 2



Open the head to eject the capsule. Close the head and turn the lever left to the lock symbol, until you hear it click.

STEP 3



Empty the water tank, water tray, capsule container, and cup support and then reinsert. The cup support and milk frother should be removed during the descaling process.

STEP 4



Add **2 packets** of Nespresso descaling solution to the water tank, then fill with water to the descaling mark on the tank.

STEP 5



Remove the descaling pipe from the back of the machine and plug it into the steam connector on the front of the machine. Machine must be ON when doing this.

STEP 6



Once the pipe is pressed in firmly, the descaling indicator light should blink and will continue to blink during descaling. Replace the water tank on the machine.

STEP 7




The Cappuccino button will illuminate white and steady.

STEP 8



Place a container of minimum 1 Liter underneath the coffee outlet and descaling pipe.

STEP 9

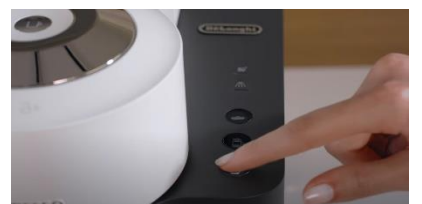

Press and release the Cappuccino button and descaling solution will begin to flow alternately from the coffee outlet, descaling pipe, and drip tray outlets.




STEP 10



The Latte Macchiato button will shine white when the descaling solution is done running through and the water tank is empty.

STEP 11

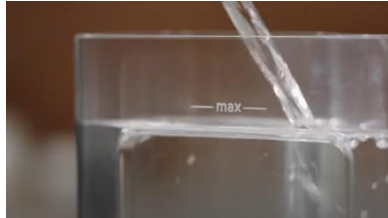

Discard the descaling solution, rinse, and wash the water tank thoroughly and refill the tank to MAX line with fresh water before placing back onto the machine.

STEP 12



Empty the drip tray, capsule container, cup support, and drop collector and reinsert.

STEP 13



Place the empty receptacle under the coffee outlet.

STEP 14



Press and release the Latte Macchiato button and rinsing will alternate between the coffee outlet, descaling pipe, and drip tray outlets.

STEP 15



The machine will go back into ready mode once the rinsing is complete. Discard the rinsing water.

STEP 16



Empty the drip tray, capsule container, cup support, and drop collector and reinsert.

STEP 17



Remove the descaling pipe with caution as it does become hot. Rinse it and replace in the storage compartment in the back of the machine.

STEP 18



Refill the water tank and place it on the machine. Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes before using.