





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



VERTUO CREATISTA



Duration: 25 Minutes

TIP: Before descaling, it is recommended to clean the steam wand tip.

NOTE: The descale and rinse cycle can be paused at anytime by pressing the Steam button. To resume, press the steam button again.

STEP 1



Descaling is needed when the descaling light blinks orange. Eject any capsules. With machine plugged in, empty the capsule container and drip tray and place back onto the machine.

STEP 2



Fill water tank with 33.81 ounces of water to the marked descaling line on the tank and add **2 packets** of Nespresso descaling solution*. Place tank back on machine.

**Avoid solution contact with eyes, skin, and kitchen surfaces.*

STEP 3



Place an empty container (*at least 65 oz*) under the coffee outlet and steam wand. With machine on, close the machine head and lock the lever.

STEP 4




Press the Steam button and the Milk Temperature button for approximately 5 seconds until the descaling light is steady yellow, the bottom and middle temp lights are on, and the steam button is flashing orange.

STEP 5




Press and release the Steam button to begin the steam and coffee descaling cycle. The descaling light and the steam button will be lit and steady and the middle temp light will blink red during descaling.

STEP 6

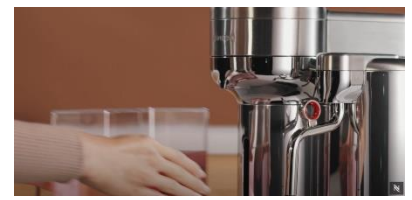

Once the descale cycle completes the Steam button will flash and just the bottom temp light will be on. Discard the descaling solution. Remove, empty, and rinse the water tank, capsule container, and drip tray.

STEP 7

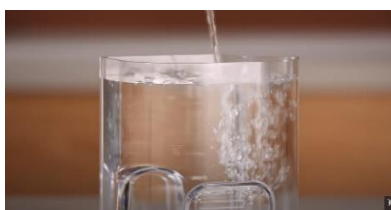

Refill the water tank to the MAX line with fresh water. Reattach to the machine.

STEP 8



Replace the capsule container, and drip tray on the machine and replace the empty container under the coffee spout and steam wand.

STEP 9



Press and release the Steam button to begin the rinse cycle.



STEP 10

The descaling light and the steam button will be lit and steady and the bottom temp light will flash red during the rinse cycle. The coffee cup button will begin to flash orange when the coffee side begins to rinse.

STEP 11

Once the rinse cycle is complete, the machine will come out of descaling on its own and all the lights will return to ready status.

STEP 12



Empty the rinsing water from the container. Remove, empty and rinse the water tank, capsule container and drip tray.

STEP 13



Refill the water tank and place it back onto the machine.

STEP 14



Replace the capsule container and drip tray on the machine.

STEP 15



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.