



my
machine



NESPRESSO®

Nespresso, an exclusive system creating the perfect Espresso, time after time.

All machines are equipped with a unique extraction system that guarantees up to 19 Bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each Grand Cru can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.

INISSIA D40_05.2013

CONTENT



These instructions are part of the appliance. Read all instructions and all safety instructions before operating the appliance.

SAFETY PRECAUTIONS	03	TROUBLESHOOTING	15
OVERVIEW	05	CONTACT THE NESPRESSO CLUB	16
SPECIFICATIONS	05	DISPOSAL AND ENVIRONMENTAL PROTECTION	16
ENERGY SAVING MODE	06	ECOLABORATION: ECOLABORATION.COM	17
FIRST USE OR AFTER LONG PERIOD OF NON-USE	07	LIMITED WARRANTY	17
COFFEE PREPARATION	08		
PROGRAMMING THE WATER VOLUME	09		
EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION, OR BEFORE A REPAIR	10		
RESET TO FACTORY SETTINGS	11		
DESCALING	12		
CLEANING	14		

SAFETY PRECAUTIONS



⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

ℹ INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature

conditions use only.

- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not

sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.

- Children should not use the device as a toy.
- The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

The appliance must only be connected after installation.

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the Nespresso Club or to a Nespresso authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water,

coffee, descaler or similar.

- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended during operation.

- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso Club* or *Nespresso* authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso Club* or *Nespresso* authorized representative.
- Fill the water tank only with fresh and

potable water.

- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso Club* or your *Nespresso* authorized representative. *Nespresso* quality is only guaranteed when *Nespresso* capsules are used in *Nespresso* appliances.
- All *Nespresso* appliances pass stringent

controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.

- *Nespresso* reserves the right to change instructions without prior notice.


Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the *Nespresso* descaling kit.

SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.

This instruction manual is also available as a PDF at nespresso.com

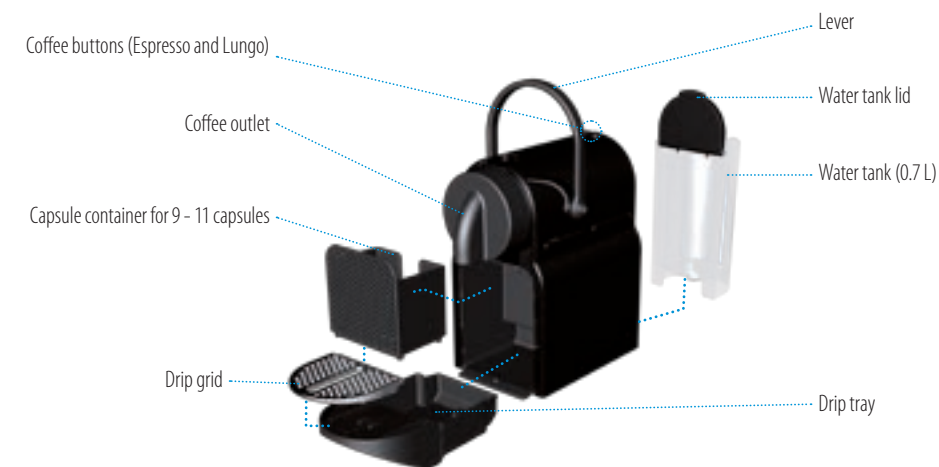

INISSIA D40	
	12 cm 23 cm 32.1 cm
	220-240 V, 50/60 Hz, 1150-1260W
P	Max/max. 19 Bar
	2.4 Kg
	0.7 L

PACKAGING CONTENT




Coffee Machine



Nespresso Grand Cru capsule tasting gift



«Welcome to *Nespresso*» Folder




Quick Start Guide




ENERGY SAVING MODE

This machine is equipped with an energy saving feature. The machine will automatically enter power off mode after 9 minutes.

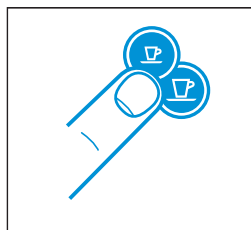


To turn the machine on either press the Espresso or Lungo button.

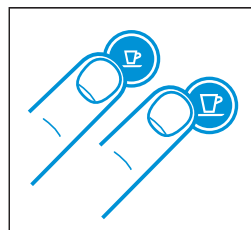

To turn the machine off before automatic Power Off mode, press both the Espresso and Lungo buttons simultaneously.


To change this setting:

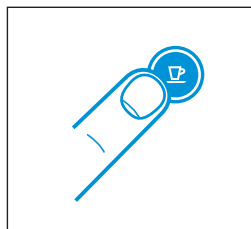


1. With machine being turned off, press and hold the Espresso button for 3 seconds.



2. The Espresso button will blink to indicate the current setting.

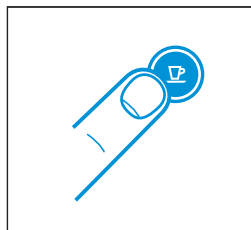


3. To change this setting press the Espresso button:
One time for power off mode after 9 minutes
One more time for power off mode after 30 minutes.

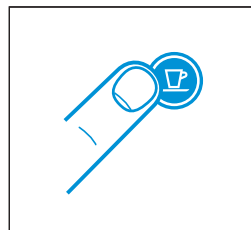

4. To exit the energy saving mode press the Lungo button for 3 seconds.

FIRST USE OR AFTER A LONG PERIOD OF NON-USE/


⚠ CAUTION: first read the safety precautions to avoid risks of fatal electrical shocks and fire.

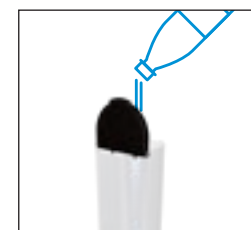


1. Rinse the water tank before filling with potable water.




2. Place a container (min. 1 L) under coffee outlet.

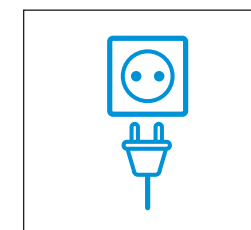

3. Plug into mains.

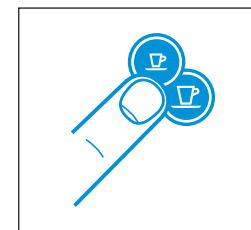


4. Press the Espresso or Lungo button to activate the machine.

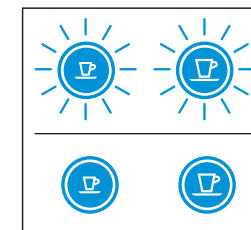


Blinking Lights: heating up (25 sec.)


Steady Lights: ready

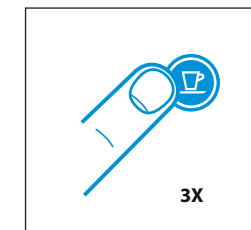


5. Press the Lungo button to rinse the machine. Repeat 3 times.

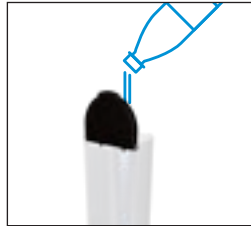

1. Rinse then fill the water tank with potable water.

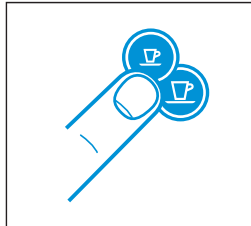

2. Press the Espresso or Lungo button to activate the machine.

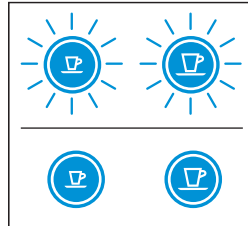

Blinking Lights: heating up (25 sec.)



Steady Lights: ready




3. Lift the lever completely and insert a Nespresso capsule.

CAUTION: never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance.

NOTE: during heat up, you can press either coffee button while blinking. The coffee will then flow automatically when the machine is ready.




4. Close the lever and place a cup under the coffee outlet.

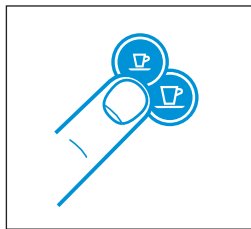

5. Press the Espresso (40 ml) or the Lungo (110 ml) button to start. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.



6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container.

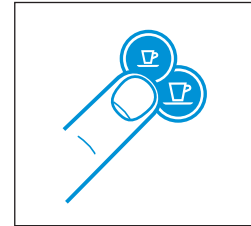


1. Turn the machine on and wait for it to be in ready mode (steady lights).



2. Fill the water tank with potable water and insert a Nespresso capsule.




3. Place a cup under the coffee outlet.

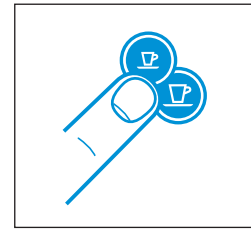


4. Press and hold the Espresso or Lungo button.

5. Release button once the desired volume is served.

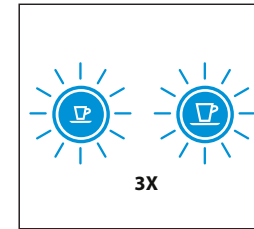

6. Water volume level is now stored.


EN **EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION, OR BEFORE A REPAIR**

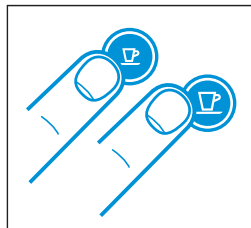


1. To enter the emptying mode, press both the Espresso and Lungo buttons to turn the machine off.



2. Remove the water tank and open the lever.

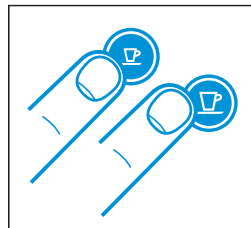

3. Press both the Espresso and Lungo buttons for 3 seconds.

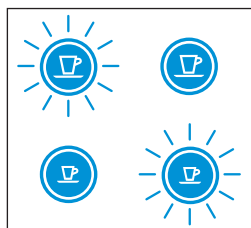

Both LEDs blink alternatively.




4. Close the lever.


5. Machine switches off automatically.

6. Empty and clean the used capsule container and drip tray.


EN **RESET TO FACTORY SETTINGS**

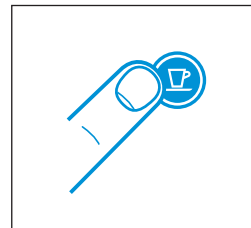

1. With machine being turned off, press and hold down the Lungo button for 5 seconds.

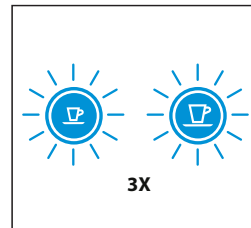

2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

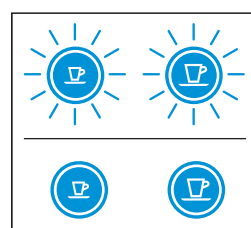

3. LEDs will then continue to blink normally, as heating up, until ready.

Steady lights: machine ready

Factory settings
 Espresso Cup: 40 ml
 Lungo Cup: 110 ml
 Power Off mode: 9 min.


NOTE: duration approximately 15 minutes.



1. Remove the capsule and close the lever.




2. Empty the drip tray and used capsule container.

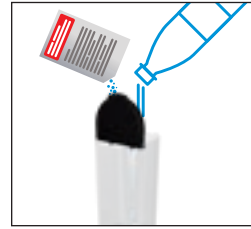


3. Fill the water tank with 0.5 L of fresh potable water and add 1 Nespresso descaling liquid sachet.




4. Place a container (min. volume 1 L) under the coffee outlet.

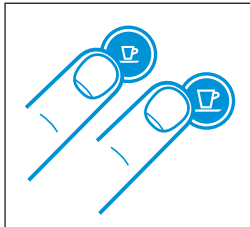

5. To enter the descaling mode, while the machine is turned on, press both the Espresso and Lungo buttons for 3 seconds.

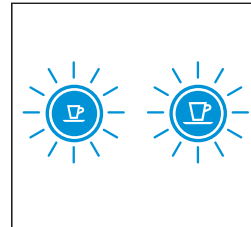


Both LEDs blink.

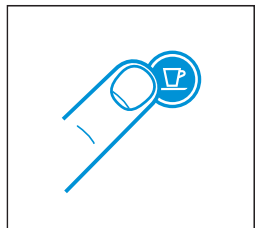

6. Press the Lungo button and wait until the water tank is empty.




7. Refill the water tank with the used descaling solution collected in the container and repeat step 4 and 6.

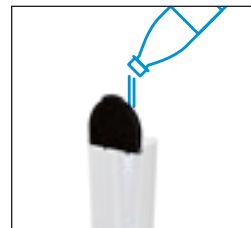


8. Empty and rinse the water tank. Fill with fresh potable water.

9. When ready, repeat step 4 and 6 to now rinse the machine. Repeat twice.

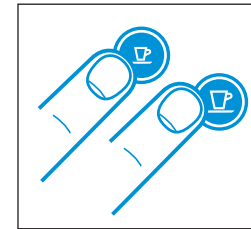

10. To exit the descaling mode, press both the Espresso and Lungo buttons for 3 seconds.

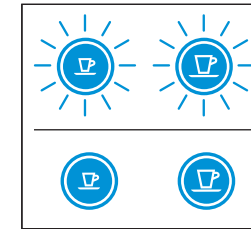

Blinking Lights: heating up (25 sec.)

11. The machine is now ready for use.


Steady Lights: ready

CAUTION: the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the Nespresso descaling kit available at the Nespresso Club to avoid damage to your machine. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your Nespresso Club.

Water hardness:		Descalce after:		fH	French grade
fH	dH	CaCO ₃	Cups, (40 ml)	dH	German grade
36	20	360 mg/l	1000	CaCO ₃	Calcium carbonate
18	10	180 mg/l	2000		
0	0	0 mg/l	4000		

⚠ WARNING**Risk of fatal electrical shock and fire.**

Never immerse the appliance or part of it in water.
Be sure to unplug the machine before cleaning.
Do not use any strong cleaning agent or solvent cleaner.
Do not use sharp objects, brushes or sharp abrasives.
Do not place in a dishwasher.

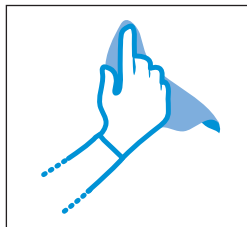

Clean the coffee outlet regularly with a soft damp cloth.



Maintenance unit can be removed in separate pieces for easy cleaning.

No light indicator.	→ Check the mains, plug, voltage, and fuse. In case of problems, call the <i>Nespresso Club</i> .
No coffee, no water.	→ First use: fill water tank with warm water (max. 55°C) and run through machine according to instructions on page 7. → Water tank is empty. Fill water tank. → Descale if necessary; see Descaling section.
Coffee comes out very slowly.	→ Flow speed depends on the coffee variety. → Descale if necessary; see Descaling section.
Coffee is not hot enough.	→ Preheat cup. → Descale if necessary.
Capsule area is leaking (water in capsule container).	→ Position capsule correctly. If leakages occur, call the <i>Nespresso Club</i> .
Irregular blinking.	→ Send appliance to repair or call the <i>Nespresso Club</i> .
No coffee, just water runs out (despite inserted capsule).	→ In case of problems, call the <i>Nespresso Club</i> .

CONTACT THE *NESPRESSO* CLUB

As we may not have foreseen all uses of your appliance, should you need any additional information, in case of problems or simply to seek advice, call the *Nespresso* Club or your *Nespresso* authorized representative. Contact details for your nearest *Nespresso* Club or your *Nespresso* authorized representative can be found in the «Welcome to *Nespresso*» folder in your machine box or at nespresso.com

DISPOSAL AND ENVIRONMENTAL PROTECTION

This appliance complies with the EU Directive 2002/96/EC. Packaging materials and appliance contain recyclable materials. Your appliance contains valuable materials that can be recovered or can be recyclable. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

ECOLABORATION: ECOLABORATION.COM



We have committed to buy coffee of the very highest quality grown in a way that is respectful of the environment and farming communities. Since 2003 we have been working together with the Rainforest Alliance developing our *Nespresso* AAA Sustainable Quality™ Coffee Program.



We chose aluminium as the material for our capsules because it protects the coffee and aromas of the *Nespresso* Grand Cru. Aluminium is also infinitely recyclable, without losing any of its qualities.



Nespresso is committed to designing and making appliances that are innovative, high-performing and user friendly. Now we are engineering environmental benefits into the design of our new and future machine ranges.

LIMITED WARRANTY

Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and *Nespresso* requires presentation of the original proof of purchase to ascertain the date. During the warranty period, *Nespresso* will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond *Nespresso's* reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where *Nespresso* sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, *Nespresso* will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of *Nespresso's* liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. The limited warranty applies only to this single-branded *Nespresso* products. Products marked with both the *Nespresso* Brand and another producer are governed exclusively by the warranty provided by that other producer. If you believe your product is defective, contact *Nespresso* for instructions on how to proceed with a repair. Any defect or dysfunction resulting from the use of non-genuine *Nespresso* capsules will be not covered by this warranty. Please visit our website at www.nespresso.com for contact details.

Nespresso תהיה אחראית לכל פגם בחומר ובטיב העבודה למשך שנה אחת מתאריך הרכישה. תקופת האחריות תחל מיום ההרשמה במועדון והצגת מסמך הוכחת קניה מקורי לצורך אימות התאריך בו בוצעה הרכישה. בתקופת האחריות *Nespresso* תתקן או תחליף כל מוצר פגום על פי שיקול דעתה ובהתאם לחוק בישראל. האחריות על מוצרים שהוחלפו או חלקים מתוקנים, תהיה למשך הזמן הנותר לתקופת האחריות המקורית או שישה חודשים, הזמן הארוך מביניהם. אחריות מוגבלת זו, אינה מכסה פגם הנוצר עקב תאונה, הזנחה, שימוש שגוי, אי הקפדה על הוראות ההפעלה, בלאי ושבר, שימוש מסחרי, שימוש במתח או בזרם החורג מהנקוב על המוצר, שינוי תוואי המוצר ללא אישור, שריפה, ברק, שיטפון או סיבות חיצוניות אחרות. שירותי האחריות מחוץ למדינה בה נרכש המכשיר מוגבלים לתנאים ולהגדרות של המדינה בה מבוקש שירות עבור המכשיר. במקרה שהתיקון או ההחלפה לא יהיו מכוסים על ידי האחריות, *Nespresso* תציג ללקוח את עלות החיוב לתיקון על מנת שיוכל להחליט האם הוא מעוניין בתיקון. פרט להיקף שמתיר החוק, התנאים לאחריות מוגבלת זו, אינם שוללים, אינם מגבילים או משנים את הזכויות החוקיות התקפות בעת מכירת מוצר זה והם נוספים לזכויות אלו. האחריות המוגבלת תקפה רק לגבי המותג *Nespresso*. אם אתם סבורים שהמוצר פגום, צרו קשר עם מועדון *Nespresso* על מנת לעדכן את דרכי ההתקשרות לאיסוף והחזרת המכשיר. כל נזק או פגם שיגרם משימוש בקפסולות שאינן יוצרו בלעדית על ידי חברת *Nespresso* לא יהיו מכוסים על ידי האחריות. אנא בקרו באתר www.nespresso.co.il לפרטים נוספים.



מספר טלפון מקומי לתפעול תקלות 1800255355 IL

אנו מתחייבים לקנות את הקפה המשובח ביותר שגודל בתנאים השומרים על הסביבה, מגוון החי והצומח והקהילות החקלאיות. מאז שנת 2003 אנו עובדים בשיתוף עם ברית ההגנה על יערות הגשם ומפתחים את תוכנית *Nespresso AAA SUSTAINABLE QUALITY*.

בחרנו באלומיניום כחומר העיטוף לקפסולות שלנו משום שהוא מגן על הקפה ועל הארומות שבכל קפסולה. בנוסף, אלומיניום הוא חומר הניתן למיחזור אינסופי ולמרות זאת הוא אינו מאבד מאיכותו.

מתחייבת לעצב ולייצר מכונות בעיצוב חדשני המשלבות ביצוע מצטיין לצד ידידותיות למשתמש, כיום אנו מקפידים להכניס יתרונות סביבתיים לצד עיצוב מתקדם של מגוון מכונות העתיד *Nespresso*.



לקבלת מידע נוסף, במקרה של תקלה או לייעוץ, אנא התקשרו למועדון Nespresso. את פרטי ההתקשרות ניתן למצוא בערכת "ברוך הבא ל Nespresso" שבתוך אריזת המכונה ובאתר www.nespresso.co.il


מיחזור ומחשבה אקולוגית

מכשיר זה תואם את התקן האירופאי EU Directive CE 2002/96/EC. חומרי האריזה של המכשיר מכילים חומרים הניתנים למיחזור. מוצר זה מכיל חומרים בעלי ערך היכולים לשמש למיחזור נוסף. ההפרדה של החומרים הנותרים מאפשרת מיחזור של חומרי גלם יקרי ערך. אנא העבירו את המכונה לאתר פסולת ייעודי. ניתן לקבל מידע על סילוק ממועדון Nespresso.

אין נורת מחוון.	← יש לבדוק את חשת החשמל, התקע, המתח, והנתיך. במקרה של בעיות, יש להתקשר למועדון נספרסו.
אין זרימת קפה, אין זרימת מים.	← מיכל המים ריק, יש למלא את מיכל המים. ← יש להסיר אבנית לפי הצורך; ראה סעיף "הסרת אבנית".
הקפה זורם החוצה בצורה איטית מאוד.	← מהירות הזרימה תלויה בסוג הקפה. ← יש להסיר אבנית לפי הצורך; ראה סעיף "הסרת אבנית".
הקפה אינו מספיק חם.	← יש לחמם מראש את הספל. ← יש להסיר אבנית לפי הצורך.
אזור הקפסולה נזל (יש מים במיכל הקפסולות)	← יש למקם את הקפסולה כהלכה. במקרה של נזילה, יש להתקשר למועדון נספרסו.
הבהוב במרחוחים לא סדירים	← יש להתקשר למועדון נספרסו.
אין יציאה של קפה, אלא רק של מים (למרות שמוכנסת קפסולה).	← יש להתקשר למועדון נספרסו.

ניקוי

נקו בקביעות את פתח יציאת הקפה עם מטלית לכה.

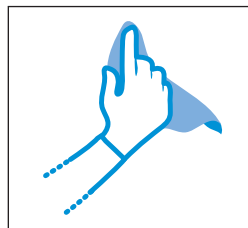

חלקי המכונה משלפים וניתנים לניקוי פשוט וקל.




⚠ אזהרה

סכנה למכת חשמל קטלנית ולשריפה.

אין לטבול את המכשיר או חלקים ממנו במים. זכרו לנתק את המכונה מהחשמל לפני הניקוי! אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. אין לשים במדיח כלים.


11. המכונה מוכנה לשימוש.

נורות מהבהבות: המכונה מתחממת 25 שניות

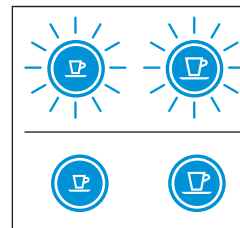

נורות קבועות: המכונה מוכנה לשימוש

10. כדי לצאת ממצב ניקוי האבנית, לחצו בו זמנית על לחצן האספרסו והלונגו למשך 3 שניות.

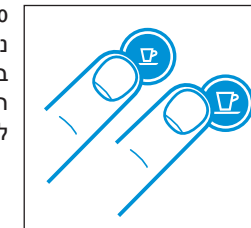

9. חזרו על פעולות 4 ו-6 כדי לשטוף את המכונה. יש לחזור על הפעולה פעמיים.

⚠ זהירות

הנוזל להסרת אבנית עשוי לגרום נזק. יש לקרוא בקפידה ולמלא אחר הוראות הבטיחות שעל אריזת הנוזל להסרת אבנית.

ⓘ שים לב סכנה לנזק כתוצאה ממגע עם חומץ.


יש להשתמש אך ורק בנוזלים מתאימים להסרת אבנית. הנוזל להסרת אבנית עלול לגרום נזק למעטפת המכשיר ולמשטח המגע. יש לנקות מיד טיפות שהותזו.

		יש להסיר אבנית אחרי:		קשיות המים:	
	צרפתי	ספלים (40 ml)	CaCO ₃	dH	fH
fH		1000	360 mg/l	20	36
dH	גרמני	2000	180 mg/l	10	18
CaCO ₃	סידן פחמתי	4000	0 mg/l	0	0

הסרת אבנית

ⓘ הערה: משך התהליך 15 דקות בקירוב.

3. מלאו את מיכל המים ב-1 מנה של מסיר האבנית של Nespresso ומלאו את היתרה ב 0.5 ליטר מים.

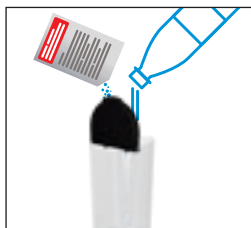


2. רוקנו את אגן הניקוז ואת מיכל הקפסולות.




1. פתחו וסגרו את ידיית הקפסולות כדי לפלוט את הקפסולה (במידה וישנה).




2. הנורות יבהבו במהירות למשך 3 שניות ויאשרו שהמכונה חזרה להגדרות יצרן.

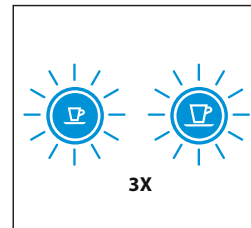


1. בזמן שהמכונה כבויה, לחצו והחזיקו את כפתור הלונגו למשך 5 שניות.

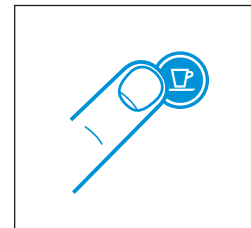

שתי הנורות יבהבו.

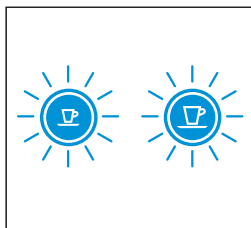

5. כדי להתחיל בניקוי האבנית, בזמן שהמכונה דולקת, לחצו בו זמנית על לחצן האספרסו והלונגו למשך 3 שניות.

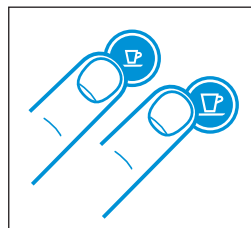


4. הניחו מיכל (1 ליטר לפחות) מתחת לפתח יציאת הקפה.




הגדרות יצרן:
 0 פל אספרסו: 40 מ"ל
 0 פל לונגו: 110 מ"ל
 מצב סטנדי ביי: 9 דקות.

3. הנורות ימשיכו להבהב באופן רגיל בזמן שהמכונה מתחממת.

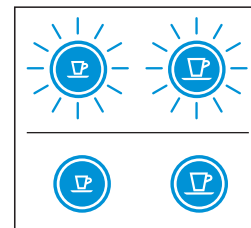

נורות קבועות: המכונה מוכנה לשימוש


8. רוקנו ושטפו את מיכל המים ומלאו במי שתייה.

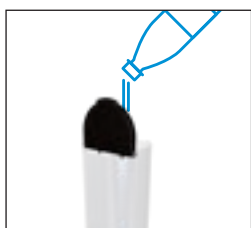

7. יש למלא מחדש את מיכל המים בנוזל להסרת האבנית מתוך המיכל, ולחזור על פעולות 4-1.




6. לחצו על לחצן הלונגו והמתינו עד שמיכל המים יתרוקן.

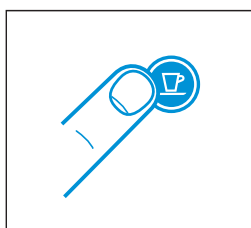

ריקון המערכת לפני תקופה ארוכה של חוסר שימוש, להגנה מפני כפור ולפני תיקון


3. לחצו על לחצן האספרסו והלונגו בו זמנית למשך 3 שניות.

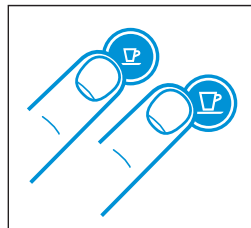

2. נתקו את מיכל המים ופתחו את ידית הקפסולות.



1. כדי להיכנס למצב ריקון המערכת, יש לחוץ על לחצן האספרסו והלונגו בו זמנית על מנת לכבות את המכונה.

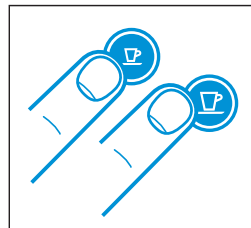


6. רוקנו ונקו את המיכל הקפסולות המשמשות ואת אגן הניקוז.

5. המכונה תכבה באופן אוטומטי.

4. סגרו את ידית הקפסולות.




שתי הנוריות יבהבו לסרגין.

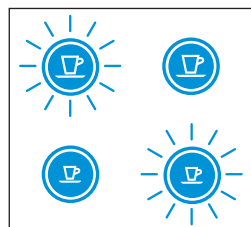

תכנות ובקרת כמות הקפה בספל

1. הפעילו את המכונה והמתינו להתחממותה (נוריות קבועות).

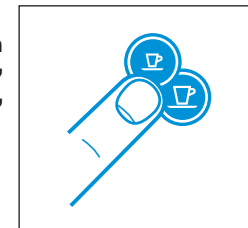


2. מלאו את מיכל המים עם מי שתייה והכניסו קפסולת Nespresso.



5. שחררו את הכפתור במפלס הרצוי.

4. לחצו והחזיקו את כפתור האספרסו או הלונגו.

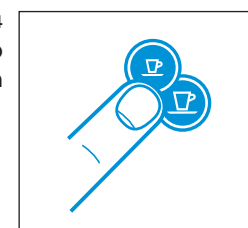


3. הניחו ספל מתחת לפתח יציאת הקפה.



6. התכנות נשמר.


הכנת קפה

נורות מהבהבות:
המכונה מתחממת
(25 שניות)

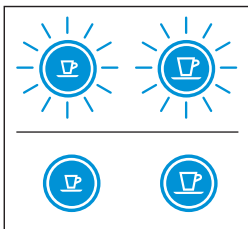


נורות קבועות:
המכונה מוכנה
לשימוש

2. לחצו על לחצן
האספרסו או הלונגו כדי
להפעיל את המכונה.

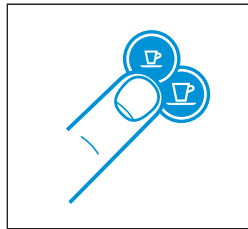

1. שטפו את מיכל
המים ומלאו במי
שתייה טריים.

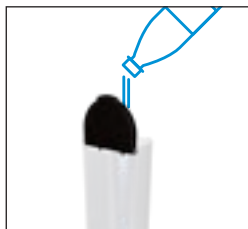

⚠ סכנה: אין להרים את ידית הקפסולות בזמן הכנת הקפה. חזרו
להוראות הבטיחות כדי להימנע מנזק אפשרי.
⚠ שימו לב: ניתן ללחוץ על כפתור הכנת הקפה (אספרסו או לונגו)
בזמן שהמכונה מתחממת. זרימת הקפה תתחיל באופן אוטומטי כאשר
המכונה תתחמם.


3. הרימו את
ידית הקפסולות
והכניסו קפסולת
Nespresso.



6. יש להרים את
ידית הקפסולות
כדי לפלוט
את הקפסולה
המשומשת
למיכל הקפסולות
המשומשות.



5. לחצו על לחצן
האספרסו (40 מ"ל) או
לחצן הלונגו (110 מ"ל) כדי
להתחיל. הקפה יפסיק
לזרום באופן אוטומטי.
בכדי לעצור את זרימת
הקפה לפני יש ללחוץ
בשנית על הכפתור.

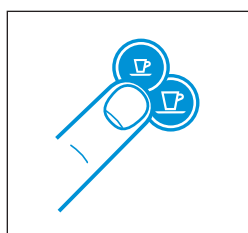


4. סגרו את
ידית הקפסולות
והניחו ספל
מתחת לפתח
ציאת הקפה.



שימוש ראשון או שימוש לאחר תקופה ארוכה של חוסר שימוש

⚠ שימו לב: יש לקרוא את הוראות הבטיחות כדי למנוע נזק.


1. שטפו את מיכל
המים ומלאו במי
שתייה טריים.

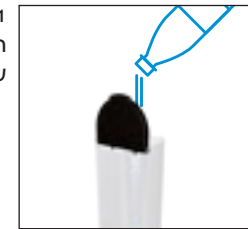

2. הניחו מיכל
(מינימום 1 ליטר)
מתחת לפתח
ציאת הקפה.




נורות מהבהבות:
המכונה מתחממת
(25 שניות)

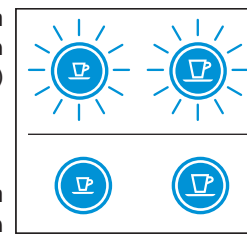


נורות קבועות:
המכונה
לשימוש


4. לחצו על לחצן
האספרסו או הלונגו
כדי להפעיל את
המכונה.

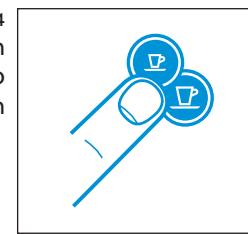

3. הכניסו את
התקע לחשמל.

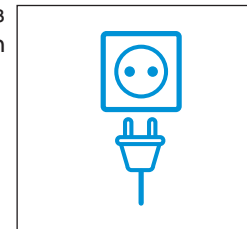

5. לחצו על לחצן
הלונגו כדי לשטוף
את המכונה. חזרו על
הפעולה 3 פעמים.

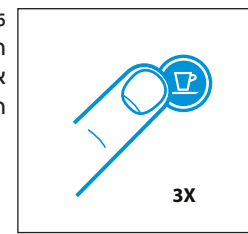

מצב חסכון בחשמל



המכונה מצוידת בפונקציית כיבוי אוטומטי. המכונה תכנס למצב כיבוי אוטומטי לאחר 9 דקות של חוסר שימוש.

בכדי להפעיל את המכונה יש ללחוץ על לחצן האספרסו או הלונגו.

בכדי להכנס למצב כיבוי לפני תחילת הפעולה האוטומטית, יש ללחוץ בו זמנית על לחצני האספרסו והלונגו.


בכדי לשנות את הגדרות היצרן:

1. בזמן שהמכונה כבויה, יש ללחוץ על לחצן האספרסו למשך 3 שניות.

2. לחצן האספרסו יבהבה על פי ההגדרה הנוכחית.

3. על מנת לשנות את ההגדרה יש ללחוץ על כפתור האספרסו. פעם אחת להגדרה של 9 דקות. פעמיים להגדרה של 30 דקות.

4. בכדי לצאת ממצב הכיבוי יש ללחוץ על לחצן הלונגו למשך 3 שניות.

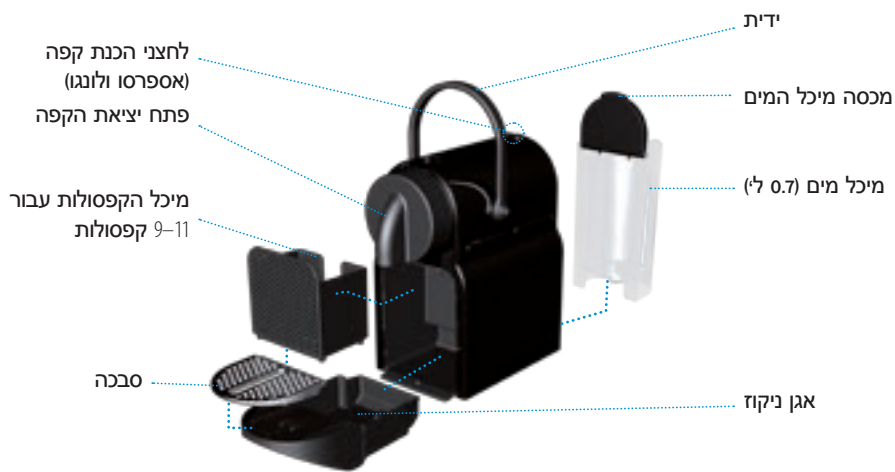


INISSIA D40	
עומק 32.1 ס"מ גובה 23 ס"מ, חתב 12 ס"מ,	
50/60 הרץ מקסי / מקסי 1150-1260 וואט, 220-240 וולט	
19 בר	P
2.4 ק"ג	
0.7 לי	

תוכן האריזה



הוראות הפעלה



ערכת "ברוך הבא ל Nespresso"



ערכת קפסולות במתנה



מכונת הקפה

- יש להחזיר את המכשיר הפגום למועדון או Nespresso למעבדת השירות של החברה.
- במידה ויש צורך בכבל מאריך, יש להשתמש אך ורק בכבל מוארק עם חתך מוליך של 1.5 ממ"ר לפחות.
- כדי למנוע נזק וסכנה, אין למקם את המכשיר על גבי משטחים חמים כגון רדיאטורים, כיריים, מבערי גז, להבה פתוחה וכדומה, או בקרבתם.
- יש להניח את המכשיר על משטח יציב ומאוזן. המשטח חייב להיות חסין אש ונוזלים, כגון: מים,
- קפה, אבנית וכדומה.
- כאשר המכשיר אינו בשימוש למשך פרקי זמן ארוכים, יש לנתקו מן החשמל. יש לנתקו

- את המכשיר על ידי הוצאת התקע ולא על ידי משיכת הכבל עצמו, אחרת הכבל עלול להינזק.
- לפני ניקוי המכשיר יש לנתקו מהחשמל ולהניח לו להתקרר.
- לעולם אין לגעת בכבל החשמל עם ידיים רטובות.
- אין לטבול את המכשיר או כל חלק של המכשיר במים או בנוזל אחר.
- אין להכניס את המכשיר או את חלקיו למדיח כלים
- (אלא אם כן בפירוש צוין אחרת בהוראות ההפעלה).
- שילוב של חשמל ומים הוא מסוכן ועלול לגרום להתחשמלות קטלנית.
- אין לפתוח את המכשיר מתח מסוכן בפנים!

- אין להכניס דבר כלשהו לתוך הפתחים. הדבר עלול לגרום לשריפה או למכת חשמל!
- יש למנוע נזק אפשרי בזמן הפעלת המכשיר.**
- אין להשאיר את המכשיר ללא השגחה בזמן שהוא עובד.
- אין להשתמש במכשיר אם הוא פגום או אינו פועל בצורה מושלמת.
- יש להוציא מיד את התקע משקע החשמל.
- יש להחזיר את המכשיר למועדון Nespresso לבדיקה, תיקון או כונון.
- מכשיר פגום עלול לגרום למכת חשמל, כוויות או שריפה.
- יש לסגור תמיד את הידית ולעולם אין להרימה בזמן ההפעלה. קיימת סכנה לכוויות.

- אין להניח את האצבעות מתחת לפתח יציאת הקפה, סכנת כוויות.
- אין להכניס אצבעות לתוך תא הקפסולות או לחלל הקפסולות. סכנת פציעה!
- מים עלולים לזרום מסביב לקפסולה במקרה שהיא אינה מנוקבת על ידי הלהבים ולגרום נזק למכשיר.
- לעולם אין להשתמש בקפסולה פגומה או מעוותת. במקרה שקפסולה נתקעה במכונה, יש לכבות את המכונה ולא לבצע בה שום שימוש. יש להתקשר למועדון Nespresso בהקדם.
- מלאו את מיכל המים במי שתיה בטמפרטורת החדר.
- יש לרוקן את מיכל המים במידה ולא

- מתבצע שימוש במשך זמן ממושך במכונה (למשל בעת יציאה לחופשה).
- יש להחליף את המים במיכל המים כאשר לא בוצע שימוש במכונה לפרק זמן ארוך, למשל בסופי שבוע.
- אין להשתמש במכשיר ללא אגן הניקוז והסבכה המכסה אותו על מנת למנוע שפירת נוזלים על המשטחים שסביב לו.
- אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. לצורך ניקוי פני המכונה, יש להשתמש במטלית לחה ובחומר ניקוי עדין.
- לניקוי המכונה.
- בהוצאת המכונה מהאריזה יש להסיר את כיסוי הפלסטיק

- מהסבכה ומהרשתות הצדדיות.
- מכונה זו פועלת עם קפסולות Nespresso שזמינות באופן בלעדי דרך מועדון Nespresso.
- התפקוד הנאות ואורך החיים של מכונת Nespresso שברשותכם מובטחים אך ורק בעת שימוש בקפסולות Nespresso.
- כל מכונות Nespresso עוברות בדיקות מחמירות וחלקן אף נלקח לבדיקות מעשיות. על כן יתכן ובחלק מהמכונות יראו סימנים של שימוש, הנובעים מאותן בדיקות.
- Nespresso שומרת לעצמה את הזכות לשנות את הוראות השימוש ללא הודעה מוקדמת.

- הסרת אבנית**
- שימוש בערכת ניקוי אבנית של Nespresso, יסייע לכם בתחזוקה נכונה של המכונה שבידכם ובכך להאריך את חיי המכונה וליהנות מקפה מושלם כמו ביום הראשון. לשימוש נכון בערכה לניקוי אבנית אנא קראו את ההוראות המצורפות לערכת ניקוי האבנית.
- יש לשמור הוראות אלו יש להעבירן למשתמש הבא.**
- ניתן למצוא את הוראות ההפעלה גם באתר האינטרנט**
- www.nespresso.com

Nespresso, הינה מערכת אקסקלוסיבית להפקת אספרסו מושלם, פעם אחר פעם. כל מכונות Nespresso בעלות מערכת מיצוי ייחודית הפועלת על לחץ מיצוי גבוה כל כל מכונות Nespresso בעלות מערכת מיצוי ייחודית הפועלת על לחץ מיצוי גבוה ביותר (19 בר). כל פרמטר במערכת תוכנן בזהירות רבה ובדיוק נרחב על מנת להבטיח כי כל הניחוחות, בכל תערובות הקפה, יתבטאו במלוא עוצמתן ויעניקו גוף, מרקם סמיך וקרמה קטיפתית וחלקה.

INISSIA D40_05.2013

תוכן עניינים

 אנא קראו את הוראות ההפעלה והבטיחות לפני ההפעלה הראשונה של המכשיר.

03	הוראות בטיחות
06	סקירה כללית
06	מפרט
07	מצב חסכון בחשמל
08	שימוש ראשון או שימוש לאחר תקופה ארוכה של חוסר שימוש
09	הכנת קפה
10	תכנות ובקרת כמות הקפה בספל
10	ריקון המערכת לפני תקופה ארוכה של חוסר שימוש
11	להגנה מפני כפור ולפני תיקון
12	החזרה להגדרות יצרן
13	הסרת אבנית
15	ניקוי
16	איתור תקלות
17	יצירת קשר עם מועדון NESPRESSO
17	פינוי והגנה על הסביבה
18	ECOLABORATION: ECOLABORATION.COM
19	אחריות

הוראות בטיחות

⚠️ זהירות - הוראות בטיחות אלו הן חלק מהמכשיר. קראו את הוראות הבטיחות במלואן לפני שימוש ראשון במכשיר. שימרו את הוראות הבטיחות במקום נגיש.

⚠️ זהירות - יש לקרוא ולמלא אחר הוראות הבטיחות במלואן כדי למנוע פגיעה ונזק אפשריים.

📄 מידע - כאשר מופיע סימן זה יש לקרוא את העצות לשימוש בטוח ונכון במכשיר.

- המכשיר נועד להכין משקאות קפה בהתאם להוראות הפעלה אלו.
- אין להשתמש במכשיר לשימושים אחרים מלבד אלו שהמכשיר נועד עבורם.

- המכשיר מיועד לשימוש בסביבה ביתית (לא חיצונית) ויש להישמר משימוש בסביבה של טמפרטורות קיצוניות.
- יש להגן על המכשיר מאור שמש ישיר, מגע מים ממושך ולחות.
- המכשיר מיועד להכנת משקאות בהתאם להוראות אלו. הוא נועד לשימוש במרחב פרטי ולשימוש פנימי בלבד. אין להשתמש במכשיר לכל שימוש שאינו השימוש המיועד.
- המכשיר אינו מיועד לשימוש על ידי ילדים מתחת לגיל 8 או אנשים בעלי מוגבלויות או על ידי אנשים שאינם בעלי ניסיון וידע ללא השגחה או הדרכה מתאימה. אין לתת לילדים לנקות את המכונה או לתחזקה ללא השגחה.

- יש להשגיח על ילדים כדי להבטיח שהם אינם משחקים עם המכשיר.
- היצרן לא ישא באחריות בגין שימוש מסחרי, שימוש לא נכון, אי ציות להוראות, שימוש בלתי הולם במכשיר או שימוש למטרות אחרות, תפעול לקוי או תיקון שלא במעבדת השירות המאושרת ע"י היצרן/יבואן.

- **יש למנוע כל סיכון למכת חשמל קטלנית ולשריפה.**
- במקרה חרום יש לנתק באופן מיידי את הכבל מהחשמל.
- יש לחבר את המכשיר לשקע חשמל מתאים ומוארק בלבד. יש להפעיל את המכשיר רק לאחר החיבור לחשמל. ודאו כי סיווג המתח של מקור אספקת המתח

- זהה לזה המצוין על גבי לוחית הסיווג. שימוש בחיבור שאינו מתאים יגרום לפקיעת תוקף האחריות.

יש לחבר את המכשיר לשקע החשמל רק לאחר הצבתו במקום בטוח.

- אין למשוך את הכבל על פני שוליים חדים. יש להדק אותו או להניח לו להיות תלוי.
- יש להרחיק את הכבל מחום ולחות.
- במידה ופתיל הזינה ניזוק, כדי למנוע סיכון, יש להחליפו אך ורק במעבדת שירות המאושרת על ידי היצרן/היבואן.
- במידה ופתיל הזינה ניזוק, אין להשתמש במכשיר.



my machine



NESPRESSO[®]



NES-432001-20030-2